

Product Warranty

Virtual Industries, Inc. PRODUCT WARRANTY LIMITED 90 DAY WARRANTY

Above named company warrants to the original consumer purchaser that this product shall be free from defects in material and workmanship for a period of 90 days from the date of purchase. If a defect covered by this warranty occurs during the 90 day warranty period, return the unit to above named company for repair or replacement of the unit, at the option of the above named company. For the correct address and return authorization call:

1-800-530-8377 or (719) 572-5566

This warranty does not cover damage or malfunctions resulting from improper handling, accident, misuse, abuse, failure of electrical power, use with other products not manufactured by the above named company, damage while in transit for repairs, repairs attempted by any unauthorized person or agency, or any other reason not due to defects in materials or workmanship. This warranty is also void if the serial number has been altered, defaced or removed.

UNIT SERIAL NUMBER _____

THE ABOVE WARRANTIES FOR GOODS ARE IN LIEU OF ALL WARRANTIES, EXPRESS, IMPLIED OR STATUTORY, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ABOVE NAMED COMPANIES LIABILITY IS LIMITED SOLELY TO THE REPAIR OR REPLACEMENT OF THE UNIT IN ITS SOLE DISCRETION, AND IN NO EVENT SHALL INCLUDE CONSEQUENTIAL COSTS, EXPENSES OR DAMAGES INCURRED BY THE PURCHASER, INCLUDING WITHOUT LIMITATION ANY DAMAGE TO PRODUCTS BEING HANDLED, EVEN IF THE ABOVE NAMED COMPANY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

THE ABOVE NAMED COMPANY shall have no obligation to enhance or update any unit once manufactured.

Some states do not allow limitations on how long any implied warranty lasts so the above limitations may not apply to you. Some states do not allow the exclusion or limitation or incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

Virtual Industries, Inc.
2130 Victor Place
Colorado Springs, CO 80915
U.S.A.



OPERATING INSTRUCTIONS AND SPECIFICATIONS

TV-100-PB Tweezer-Vac® System - Non ESD Safe

Model No. TV-100-PB




技术咨询与报价
电话: 18823303057 QQ:2104028976



Operation of the TV-100-PB

1. Connect the vacuum hose to the vacuum fitting on the front of the TV-100-PB. Make sure the hose is pushed all of the way on. Connect the other end of the vacuum hose to the rear of the vacuum handle, make sure the hose is pushed all the way on.
2. Select a probe with a vacuum cup that is slightly smaller in diameter to the outline of the parts that you want to pick and place. Securely install it on the tapered end of the vacuum handle. Selecting a vacuum cup that is too large or too small will result in improper operation.
3. Connect the TV-100-PB power cord to input power. Turn the power cord ON/OFF switch to the on position.
4. To pick and place a part:
 - a. Gently place the vacuum cup on top of the part that you wish to pick up, place your finger over the control hole. The part should now be firmly grasped by the vacuum cup.
 - b. Now move the part to where you want it.
 - c. To release the part simply remove your finger off the control hole, the part should now be released.
5. Remember to turn the unit off when you are finished.

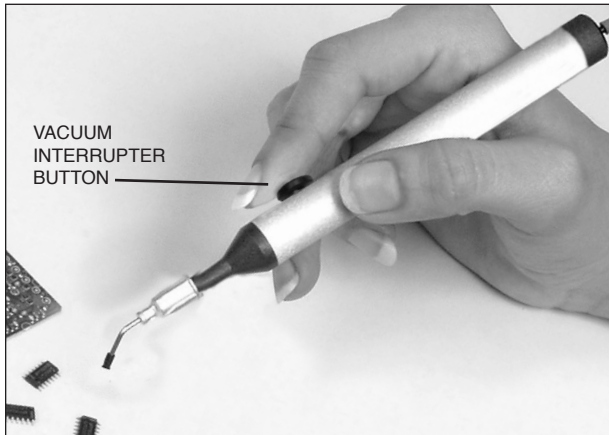

Specifications

NON-ESD SAFE:
 TWO WIRE CORD
 ELECTRICALLY CONDUCTIVE VACUUM CUPS
 STATIC DISSIPATIVE RUBBER HOSE
 STATIC DISSIPATIVE PLASTIC NOZZLE

VACUUM:
 MINIMUM 6 INCHES OF MERCURY AT SEA LEVEL.

DIMENSIONS:

LENGTH	HEIGHT	WIDTH
4.25" (108mm)	2.38" (60mm)	2.5" (64mm)

WEIGHT:
 1.24 LBS. (463 GRAMS)

POWER REQUIREMENTS:
 MODEL # TV-100-PB 110 VOLTS A.C. 50/60 HERTZ 8 WATTS

TV-100-PB OPTIONS

VACUUM INTERRUPTER P/N V3025
 Facilitates precision placement of small parts. The hand that holds the wand is used to position and/or rotate the part being placed while the other hand makes or breaks the vacuum by covering or uncovering the control hole on the interrupter block.

SELECTION OF VACUUM CUPS WITH PROBES
 The vacuum cups are a soft rubber material that allow handling a wide variety of small parts.

SELECTION OF MINIATURE VACUUM TIPS
 These tips are designed to handle tiny parts as small as 0.01" (0.25mm).

技术咨询与报价

电话: 18823303057 QQ:2104028976

For technical assistance call toll free 1-800-590-2829
 Tele: 719-572-5566
 Fax: 719-572-5504
 8:00 A.M. to 4:30 P.M. Mountain Standard Time